


CTL Chromebook Plus PX141GX / PX141GXT

USER MANUAL

ENGLISH

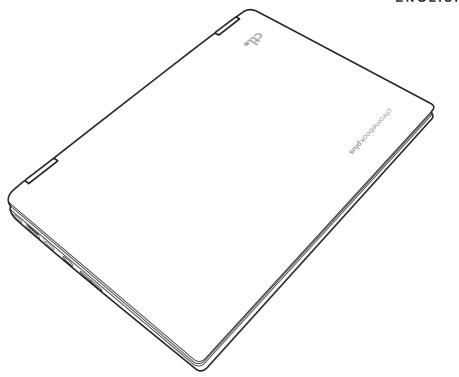

Contents

Table of Contents

| 1. | Knov | wing | the | Parts |
|----|------|------|-----|--------------|
|----|------|------|-----|--------------|

| Top and Front Sides | 3 |
|---------------------|---|
| Left Side | |
| Right Side | 6 |
| 2. Getting Started | |
| Power System | |
| Using Battery Power | |
| Battery Care | 9 |

1. Knowing the Parts

Basic sides of the Chromebook


NOTE: Photos and icons in this document are used for artistic purposes only and do not show what is actually used in the product itself.


1 Knowing the Parts

Top and Front Sides

Refer to the diagram below to identify the components on these sides of the Chromebook.

NOTE: The keyboard will be different for each territory.

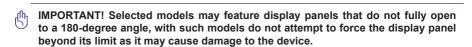

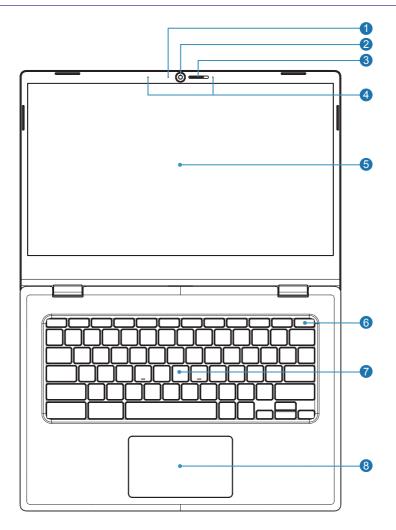

1 Camera Indicator

Indicates whether the built-in camera is in operation.



Allows picture taking or video recording for video conferencing and other applications.



Camera Shield

Used to protect your privacy by covering the camera lens.



🐠 🌵 Microphone

Used for video conferencing, voice narrations, or audio recordings.




5 □ Display Panel

Displays the Chromebook's user interface.



NOTE: Use a soft cloth without chemical liquids (use plain water if necessary) to clean the display panel.

O Dower Switch

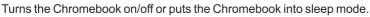



7 🦠 Keyboard

Used to enter data into the Chromebook.



8 ☐ Touchpad and Buttons


Allows navigating via touch gestures and clicking like a computer mouse.



NOTE: You can customize the touchpad settings in the Device sub-menu in the Settings menu.

Left Side

Refer to the diagram below to identify the components on this side of the Chromebook.

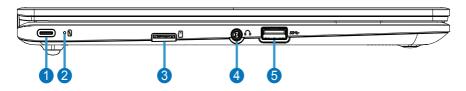

Supplies power to the Chromebook and charges the internal battery. Also features USB version 3.2 functionality using a Type-C connector (USB-C).



- · For use with storage devices.
- · Supports a maximum transfer speed of up to 5 Gbps.
- · Supports USB Power Delivery up to 45W.
- · Compatible with DisplayPort interface.



CAUTION! Always use the supplied power adapter to prevent damage to the Chromebook.

2 N Battery Charge Indicator

Shows the Chromebook's charging status:

On: Connected to the AC power adapter.

Off: Not connected to the AC power adapter.



September 1
§ Flash Memory Card Reader

Reads and writes microSD cards used in devices such as digital cameras and mobile phones.



Used to connect to amplified speakers, headphones, or a microphone. Using this jack automatically disables the built-in speakers.



Allows using USB hubs to simultaneously run multiple devices on the Chromebook. Supports hot-swapping of devices. Supports charging devices while in sleep mode.



Right Side

Refer to the diagram below to identify the components on this side of the Chromebook.



Allows using USB hubs to simultaneously run multiple devices on the Chromebook. Supports hot-swapping of devices. Supports charging devices while in sleep mode.



Power (DC) Input / USB 3.2 Port (Type-C)

Supplies power to the Chromebook and charges the internal battery. Also features USB version 3.2 functionality using a Type-C connector (USB-C).



- · For use with storage devices.
- · Supports a maximum transfer speed of up to 5 Gbps.
- · Supports USB Power Delivery up to 45W.
- · Compatible with DisplayPort interface.





CAUTION! Always use the supplied power adapter to prevent damage to the Chromebook.



Allows the Chromebook to be secured to a fixed object using Kensington® compatible security products preventing it from being removed.

| Notes |
|-------|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |

2. Getting Started

Power System

NOTE: Photos and icons in this document are used for artistic purposes only and do not show what is actually used in the product itself.


Power System



Using AC Power

Your Chromebook comes with a universal AC-DC adapter applicable to any 100V-120V and 220V-240V outlets without using power converters.

When using the adapter, connect the AC power cord to the adapter, the power cord to an AC outlet, and then the USB Type-C connector to the Chromebook. The power indicator on the adapter (if available) will light if the power is within accepted ranges.

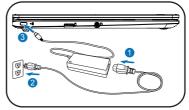

If a power strip is used, ensure the total ampere rating of the products plugged into the power strip does not exceed the ampere rating of the power strip.



NOTE: The image is for reference only and may not show what is actually used for the product itself.



IMPORTANT! This Chromebook may come with a two or three-prong plug depending on territory. If a three-prong plug is provided, you must use a grounded AC outlet to ensure safe operation. DO NOT remove the grounding prong from the power cable plug.



IMPORTANT! Damage may occur if you use a different adapter to power the Chromebook. If there is smoke, burning scent, or extreme heat coming from the adapter, turn OFF the Chromebook and contact an authorized service center. You may damage both the Chromebook and its battery with a faulty adapter.



IMPORTANT! Plug the adapter into an AC outlet that is easily accessible at all times and place the adapter in a ventilated area. DO NOT place heavy objects on the adapter or cover it with anything that will reduce cooling. DO NOT use the adapter inside a carrying case.



WARNING! DO NOT cover the adapter. Keep it away from your body as it may become hot when in use.



Using Battery Power

The Chromebook is designed to work with a battery. A fully charged battery will provide several hours of battery life, which can be further extended by using the power management features in the Device sub-menu in the Settings menu.



🕌 Battery Care

There is a limit on the number of times the battery can be recharged. Its lifespan will depend on your environment temperature, humidity, and how your Chromebook is used. Use the battery in a temperature range between 5°C and 35°C (41°F and 95°F) to ensure a longer battery life. Leaving a battery in a surrounding environment with extremely high temperature can result in an explosion or the leakage of flammable liquid or gas.



WARNING! DO NOT throw any batteries into fire, DO NOT short circuit the contacts, and DO NOT disassemble any batteries. If there is any abnormal operation or damage to the batteries, turn OFF the Chromebook and contact an authorized service center. Use only approved batteries. Using an incorrect battery type can cause a risk of explosion. Follow local regulations for instructions to dispose of used batteries.

Power System

ENERGY STAR® Qualified Product



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

All products with the ENERGY STAR® logo comply with the ENERGY STAR® standard, and the power management feature is enabled by default.

The monitor is automatically set to sleep within 10 minutes of user inactivity; the computer is automatically set to sleep within 30 minutes of user inactivity. To wake your computer, click the mouse, press any key on the keyboard, or press the power button.

CTL Contact Information

CTL Corporation

Address: 9700 SW Harvest Court

Building #100

 Telephone:
 800-642-3087

 Fax:
 503-526-9135

 Website:
 http://www.ctl.net

Telephone Support: 800.645.8670
Email: support@ctl.net
Website: http://support.ctl.net

CTL Europe / Spain Headquarters:

Address: Pontevedra n°8, Piso 1, Oficina 6

36202 Vigo, Pontevedra, Espania

Teléfono: 986 11 74 73

Email: atencionalcliente@ctl.net

Website: http://es.ctl.net

Authorized representative

in Europe

CTL Spain S.L

Pontevedra nº8, Piso 1, Oficina 6 36202 Vigo, Pontevedra, Espania

